





Movable wall manual

Closing the wall

- Move the panels to the closing line and connect them to each other. It is important that the panels always come in the same order.

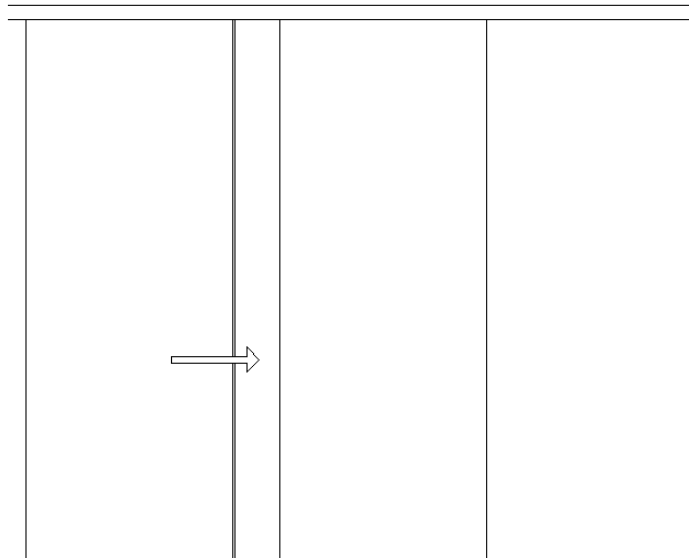


- The panels are secured by a mechanism accessed through the frame at the back.

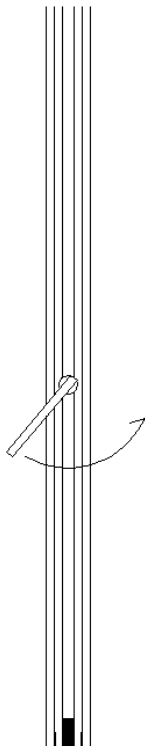


If the wall has a door panel

- The door panel is secured in the same way as the other panels.
- Open the door and push down the plate. The door is now ready to be used.

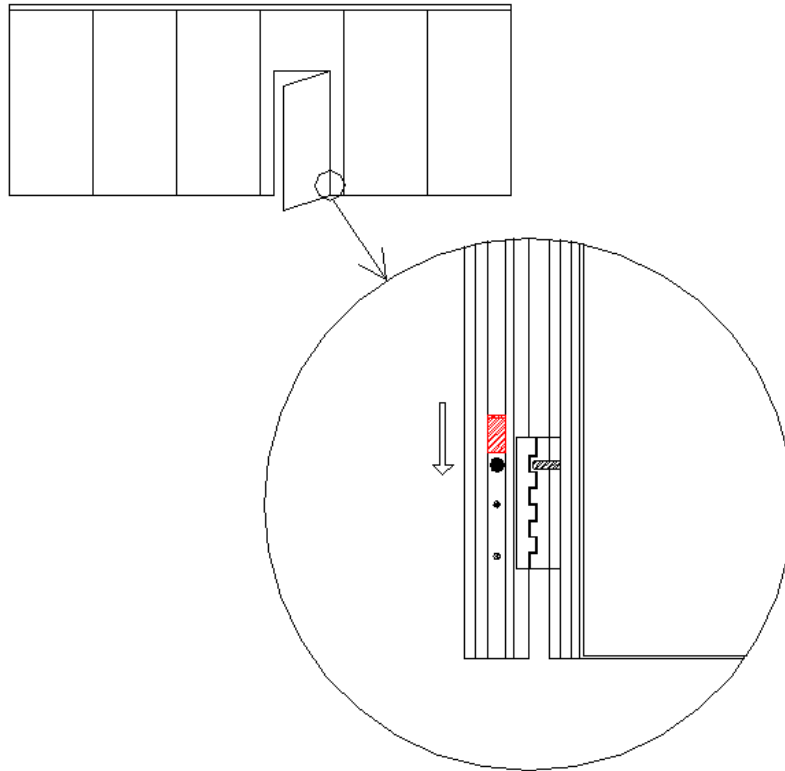

- Set up the rest of the wall. The last panel is the telescopic panel and has a part that extends to seal the wall sideways.


- Secure the telescopic panel. Note the order, start next to the telescopic part.

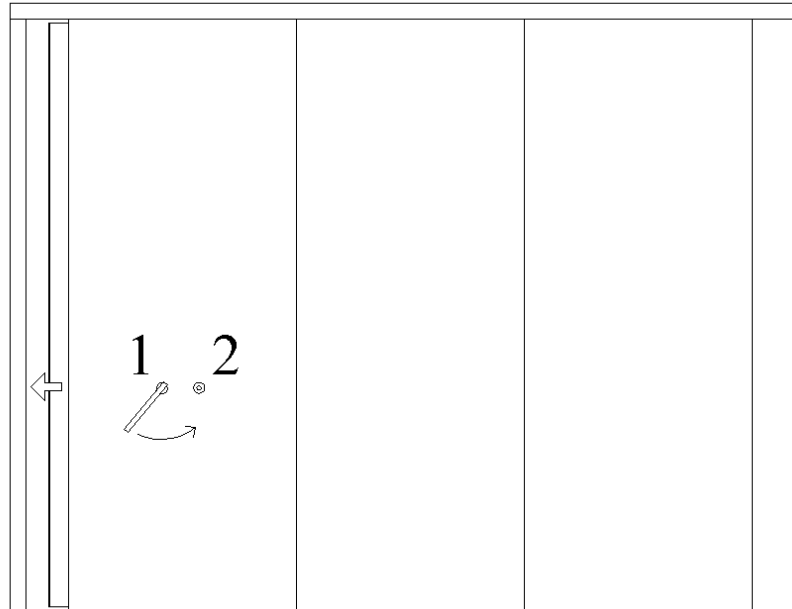

- The wall is now completed.


Removal of the wall

- Release the telescopic panel. Note the order, start furthest from the telescopic part. It is important to turn until the push beams are fully retracted.

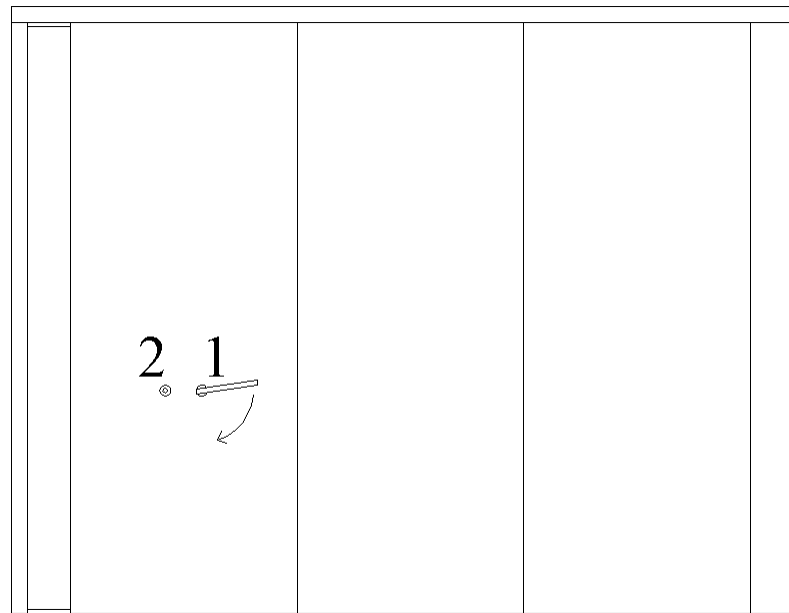


If the wall has a door panel


- Open the door and pull up the plate, close the door.

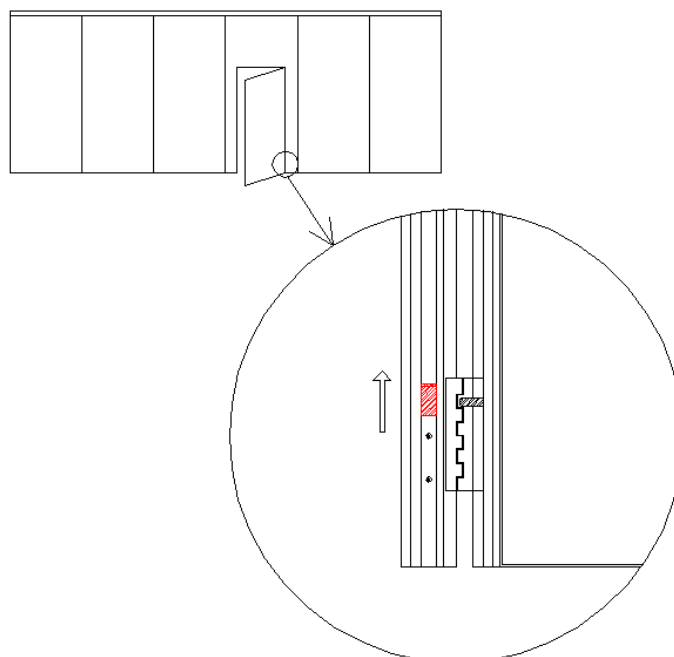

- Release the panels at the edge of the frame, important to turn until the push beams are fully retracted.

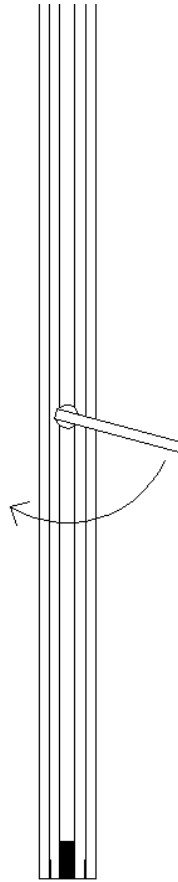

- Finally move the panels to the parking area.

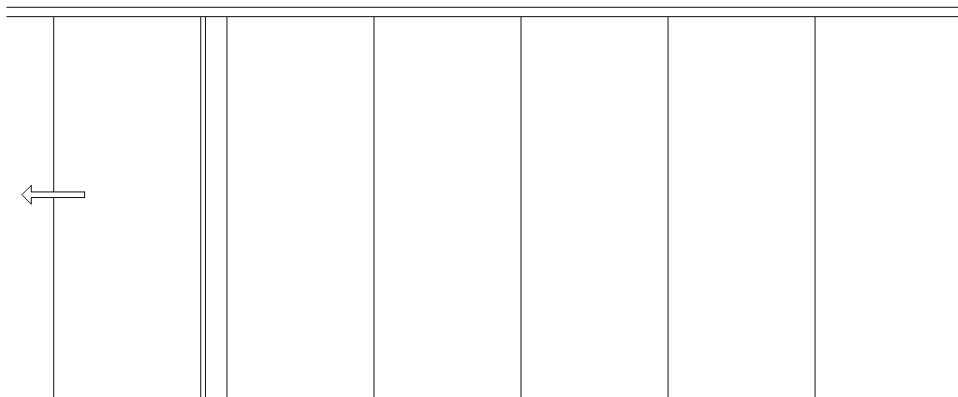


Troubleshooting

- Turn handles that has been broken must be discarded.
Contact WINAB to order a new one.

If the wall has a door section

- If necessary, adjust the push bars of the door by turning the push stud.

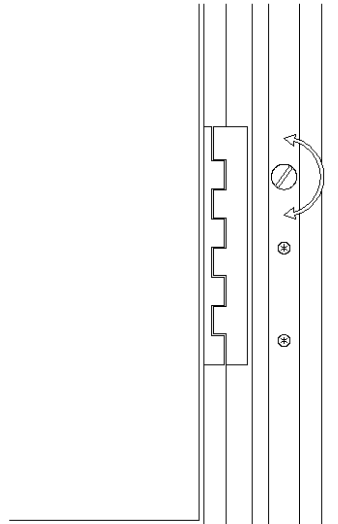

Maintenance instructions

All included components are one time lubricated and need no further maintenance.

When cleaning the wall, use a damp cloth. If more thorough cleaning is necessary, add a mild soap solution.

winab

Box 38
178 21 Ekerö

+46 (0)8-560 211 00